

SAFETY

Always check the Eco-burner for damage before use.

Never over-fill the Eco-burner.

An Eco-burner filled beyond the recommended level may produce a higher than normal flame.

If accidentally over-filled, burn off excess fuel in a safe environment to reach the correct gas level.

Never fill the Eco-burner in a sink or basin.

NEVER allow a chafing dish to run dry. Always ensure at least 2cm of water.


Take care when removing the Eco-burner after use as parts will be very hot.

OVERTURNED SAFETY DEVICE (OSD) - The Eco-burner will extinguish if fully overturned.

- If this happens, turn the control dial fully clockwise to the off position.

OVER TEMPERATURE VALVE (OTV) – The OTV turns off the Eco-burner if it overheats.

- Always investigate and fix overheating problems before resetting and relighting.
- Allow the Eco-burner to sit for at least 3 minutes before resetting.
- Find the OTV Reset Tool hanging at the side of Filling Station scale.
- Reset the OTV device by carefully pushing the OTV Reset Tool between the Reflector Plate and Control Dial until it contacts the edge of the Reflector Plate.

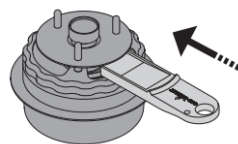

Please refer to the Operating Instructions for further information.